 



Supreme Air Fume Hood Technical Data

Bench Hood – Rough-In Information

Rough-In for H05–H07–H10–H70 Bench Hoods

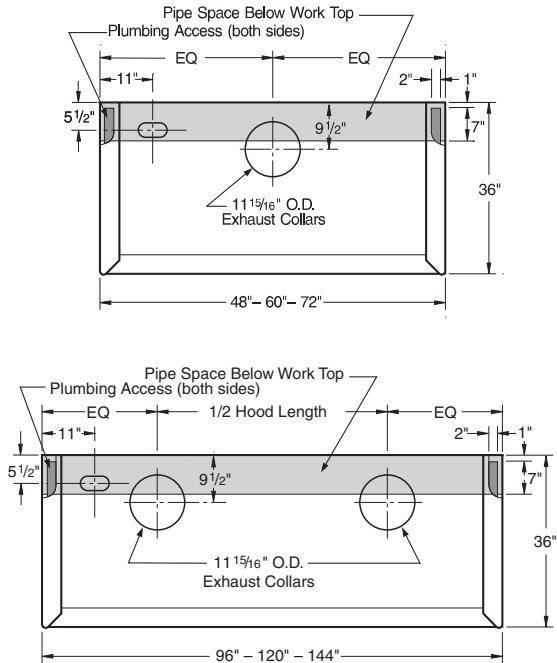


 Rough-In for H09 ADA Bench Hood

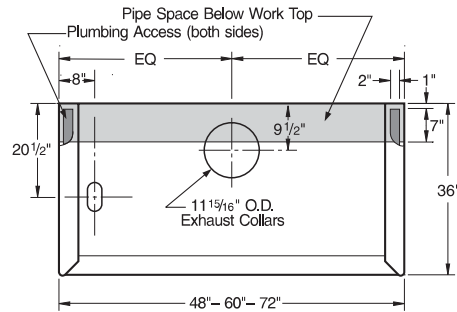


Bench Hood – Dimensional Information

 Vertical Section H05 & H07 Bench Hoods

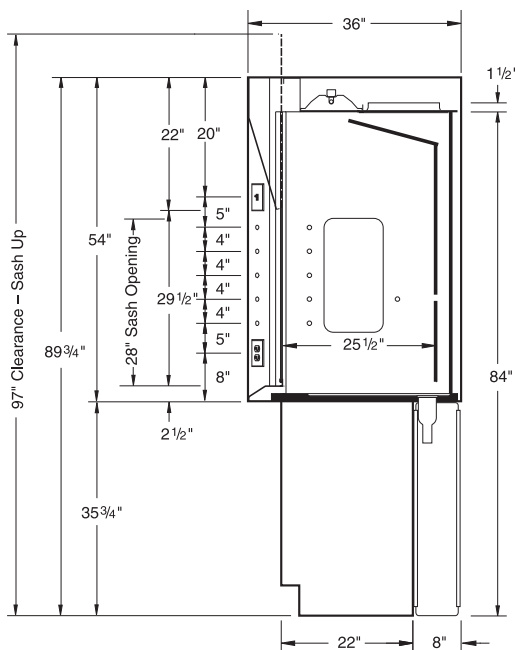

 
Vertical Section H08 & H09 ADA Bench Hood

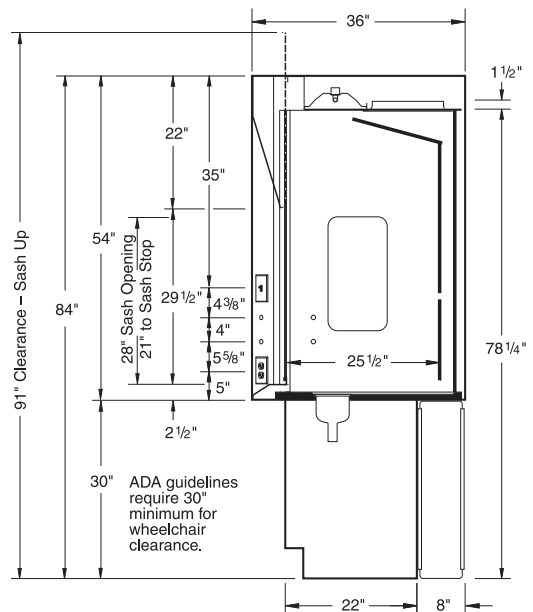


Supreme Air Fume Hood Technical Data

Bench Hood – Dimensional Information

 **Vertical Section
H10 Split Sash Bench Hood**

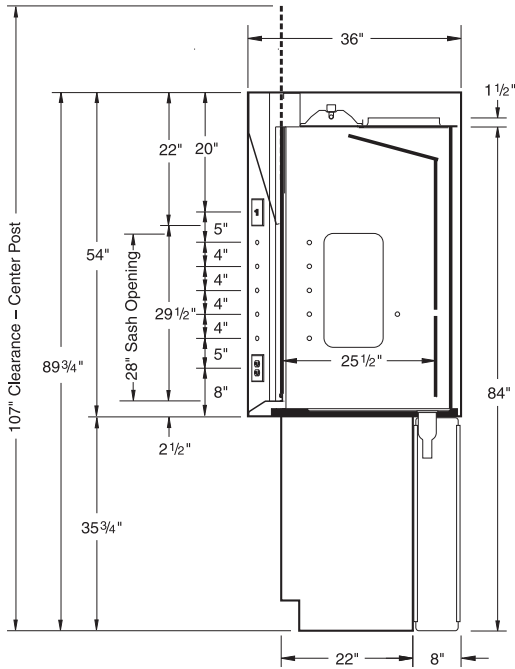


 **Vertical Section
H70 Horizontal Sash Bench Hood**

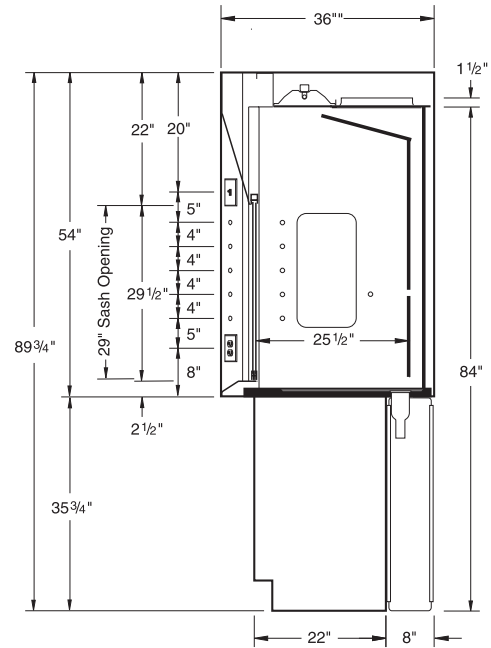


Dynamic Barrier Bench Hood – Rough-In & Dimensional Information

 Rough-In for H50 Dynamic Barrier Bench Hood

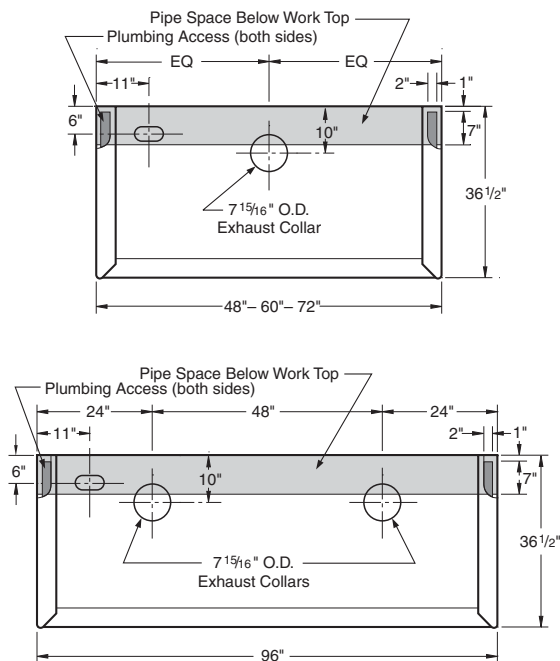

 
**Vertical Section
H50 Dynamic Barrier Bench Hood**

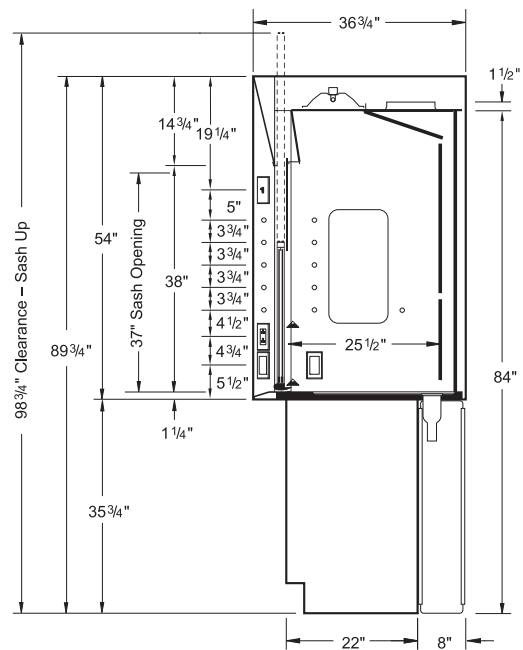


Supreme Air Fume Hood Technical Data

Isotope Hood - Rough-In & Dimensional Information

 Rough-In for H20 Isotope Bench Hood

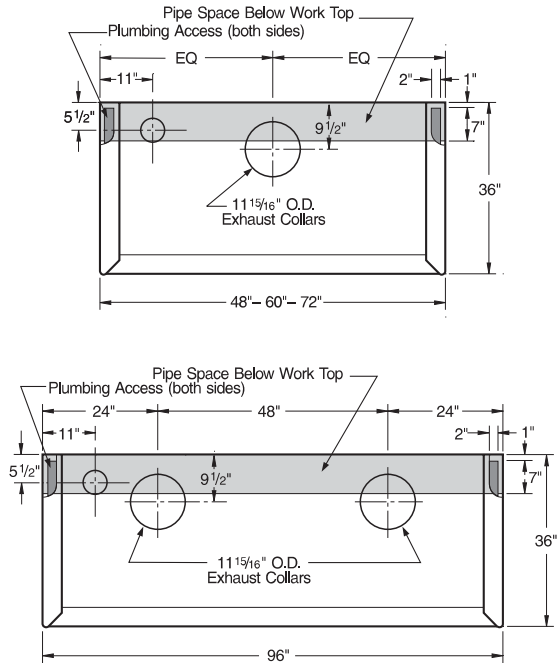


Vertical Section H20 Isotope Bench Hood

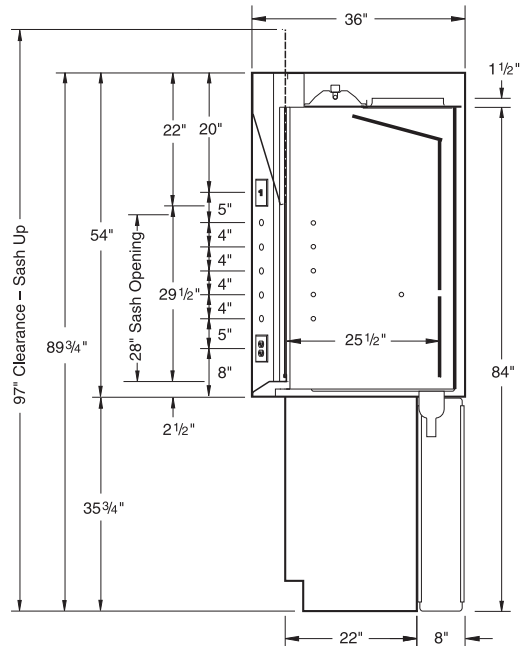 


Perchloric Acid Hood - Rough-In & Dimensional Information

 Rough-In for H25 Perchloric Acid Hood

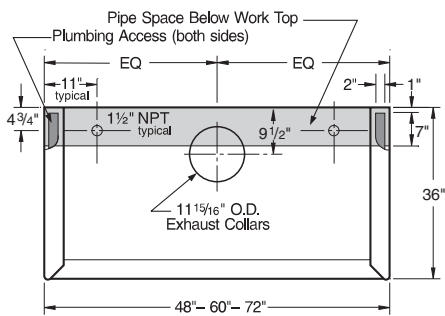

 
Vertical Section H25 Perchloric Acid Bench Hood

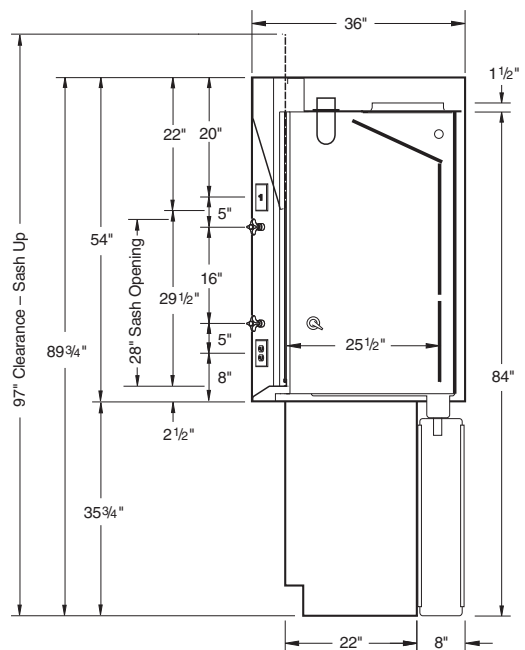



Supreme Air Fume Hood Technical Data

Walk-In Hood - Rough-In Information

 Rough-In for H30 & H32 Vertical Sash Walk-In Hoods

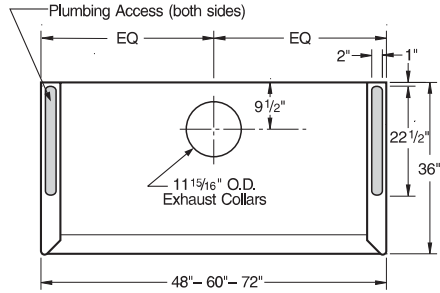


  Rough-In for H34 Horizontal Sash Walk-In Hood

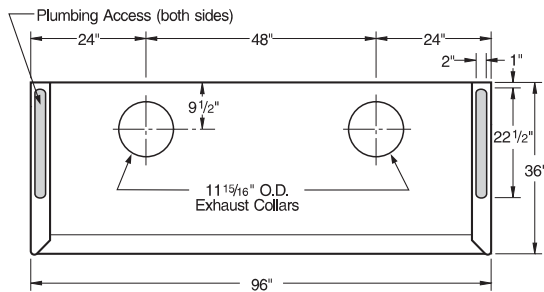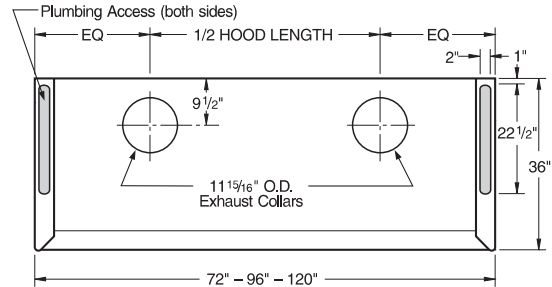


Walk-In Hood - Dimensional Information

 Vertical Section H30 & H32 Vertical Sash Walk-In Hoods

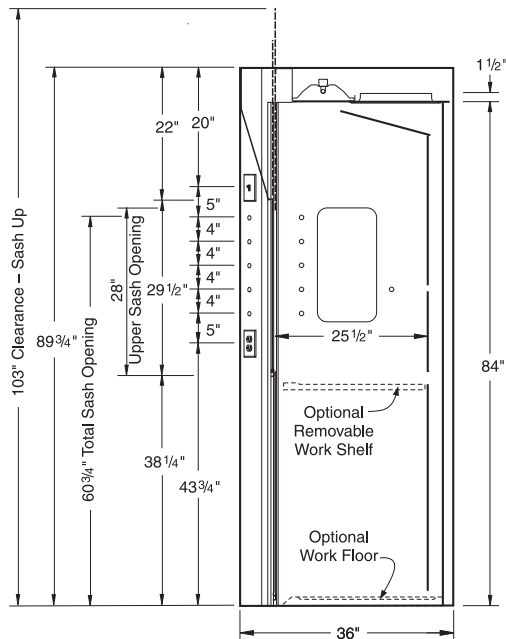

 
Vertical Section H34 Horizontal Sash Walk-In Hood

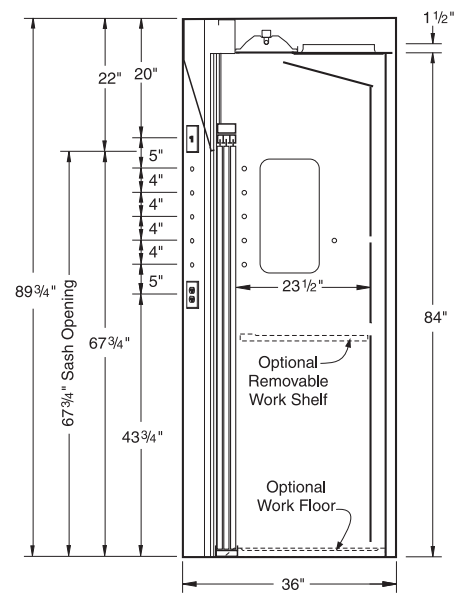


Supreme Air Fume Hood Technical Data

Dynamic Barrier Walk-In - Rough-In & Dimensional Information

 Rough-In for H52 Dynamic Barrier Walk-In Hood

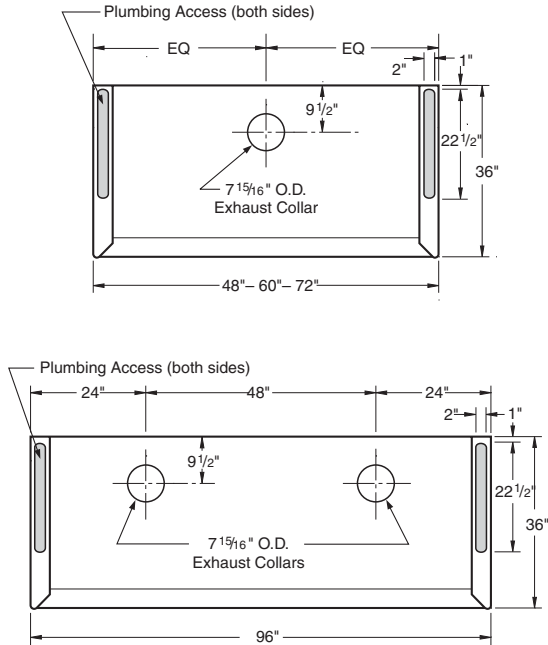


 Vertical Section H52 Dynamic Barrier Walk-In Hood

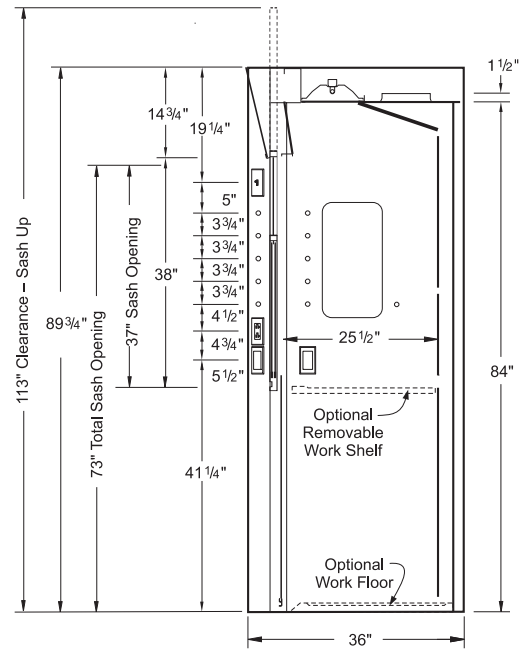


Distillation Hood - Rough-In & Dimensional Information

 Rough-In for H36 Distillation Hood

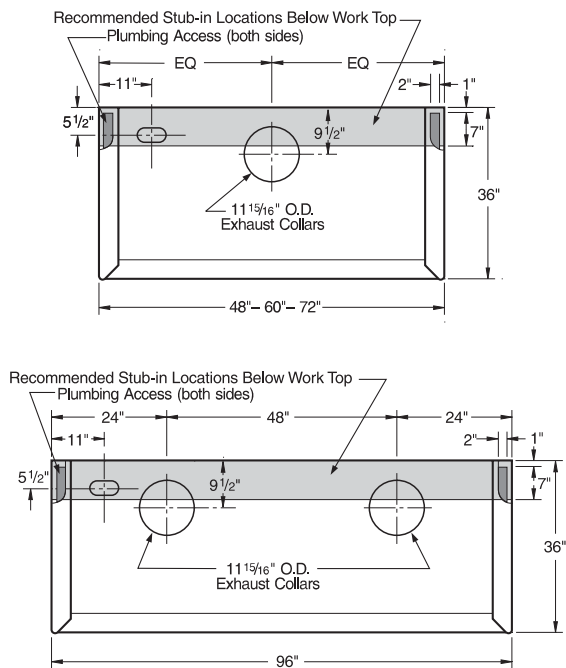


Vertical Section H36 Distillation Hood

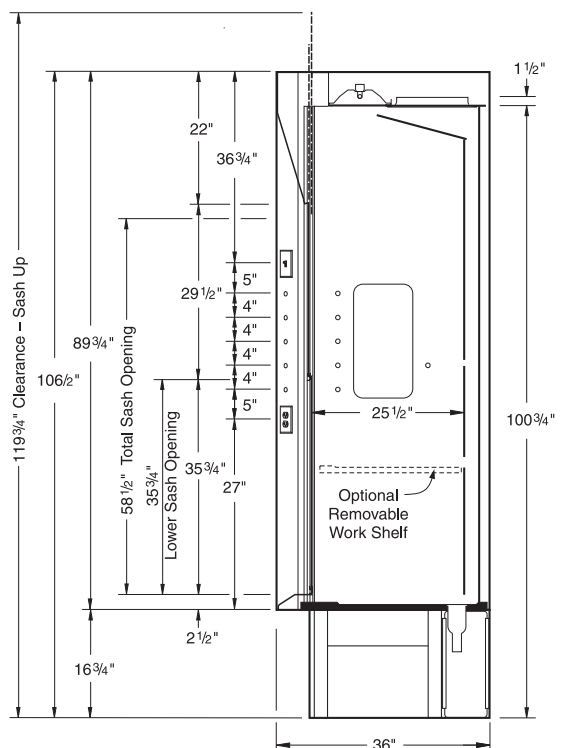 


Supreme Air Fume Hood Technical Data

HOPEC Bench Hood - Rough-In & Dimensional Information

 Rough-In for HOP Bench Hoods

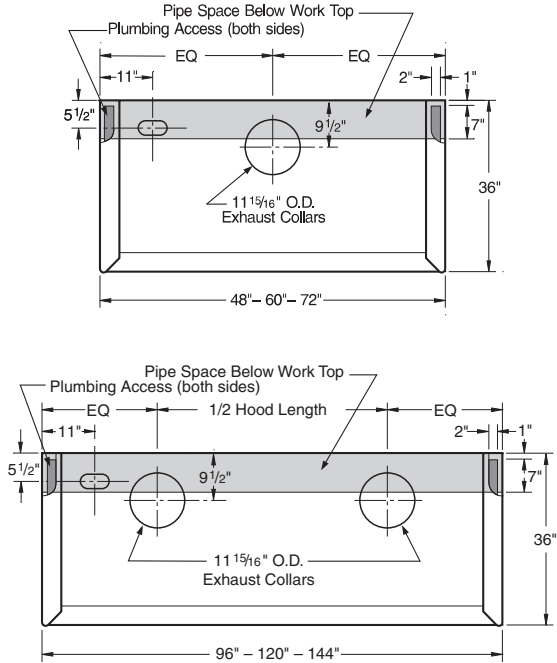


Vertical Section HOP Bench Hoods

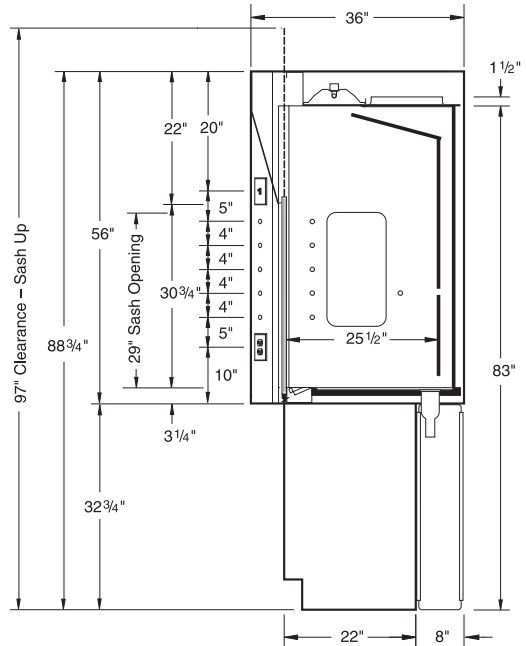 


Supreme Air LV Bench Hood - Rough-In & Dimensional Information

 Rough-In for Supreme Air LV Bench Hoods

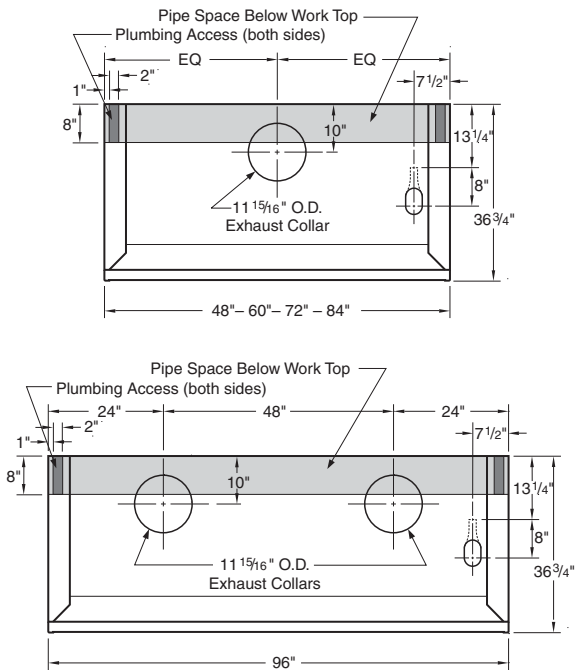

 
Vertical Section Supreme Air LV Bench Hoods

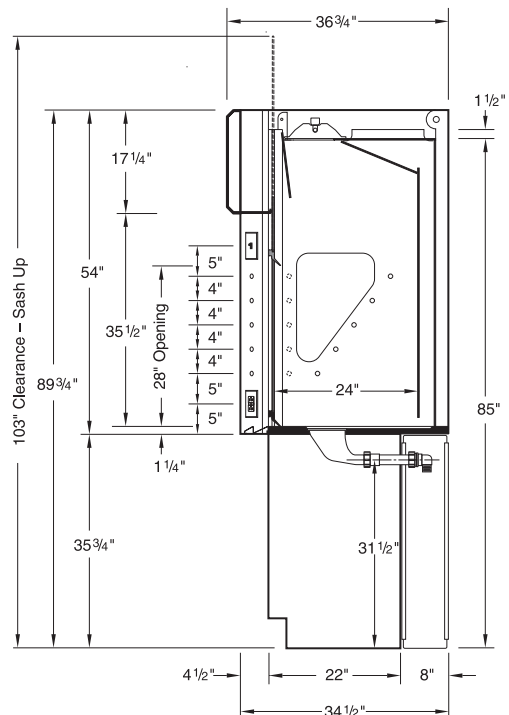


Supreme Air Fume Hood Technical Data

Auxiliary Air Chamber - Rough-In & Dimensional Information

 
4'-0" - 48"

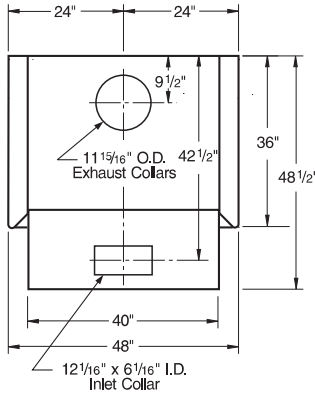


5'-0" - 60"

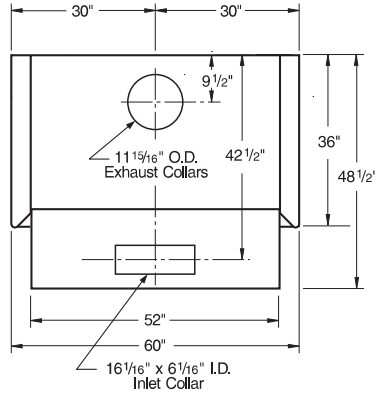 


6'-0" - 72"

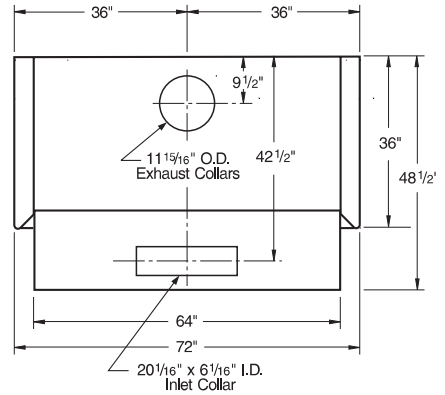 


8'-0" - 96"

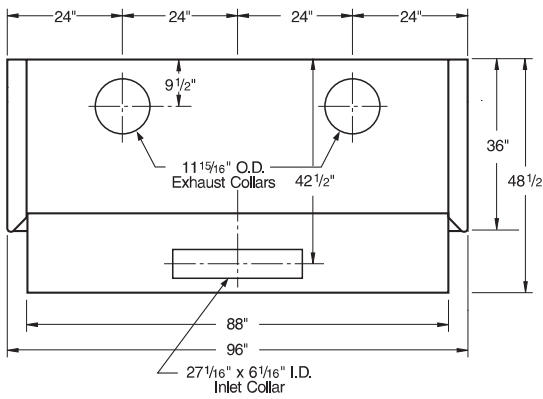 


10'-0" - 120"

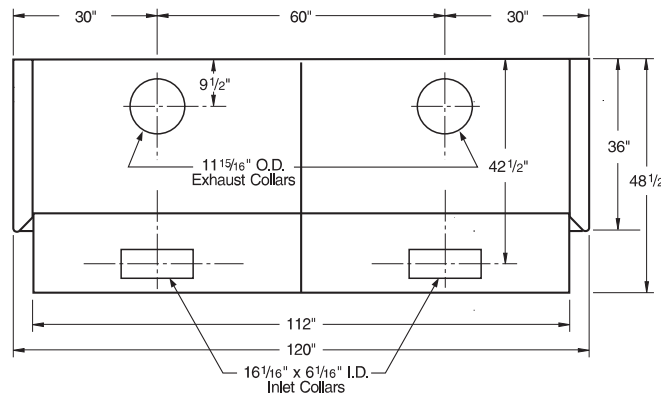 

12'-0" - 144"

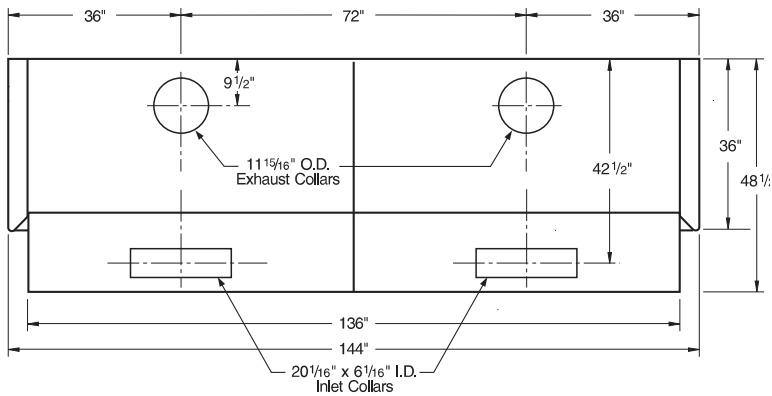 


Vertical Section

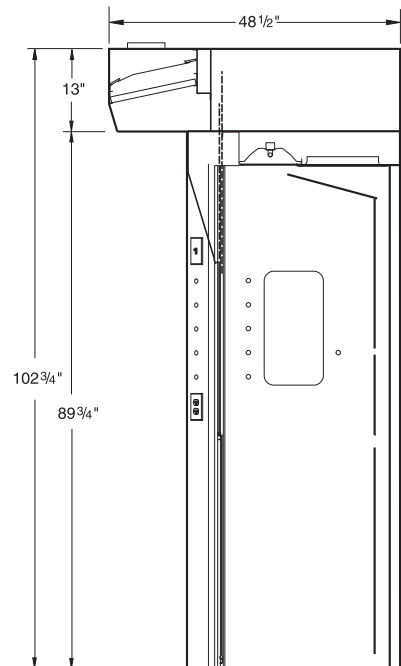 


TruView® Teaching Hood Technical Data

 
Single-sided Hood Rough-In Information

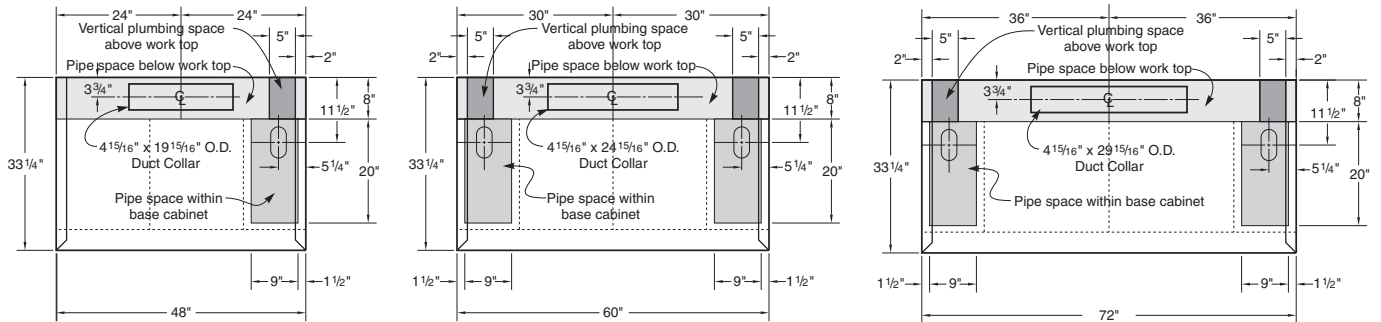

Double-sided Hood Rough-In Information

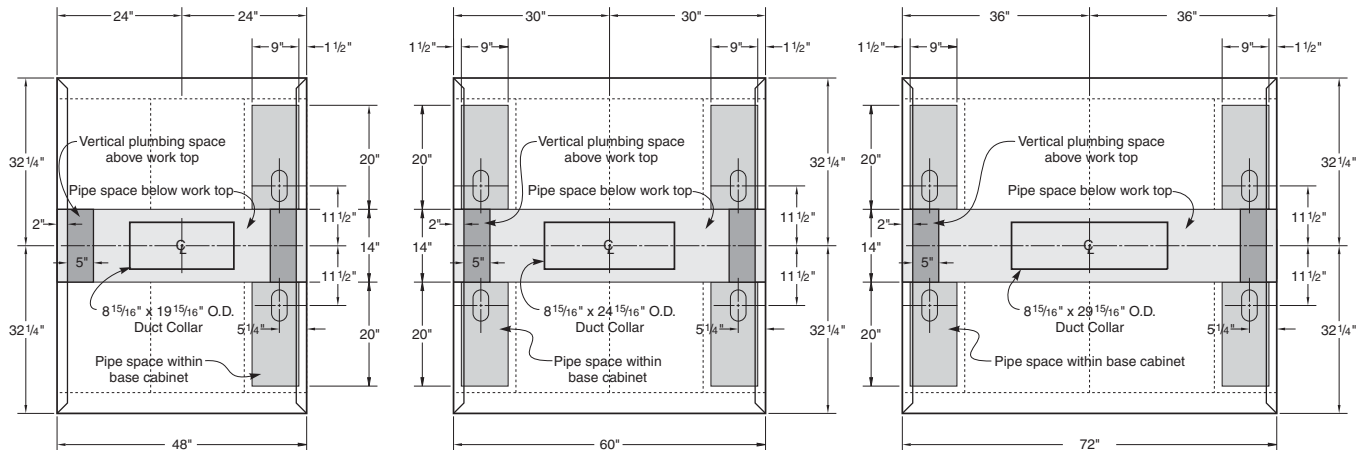 

Dimensional Information

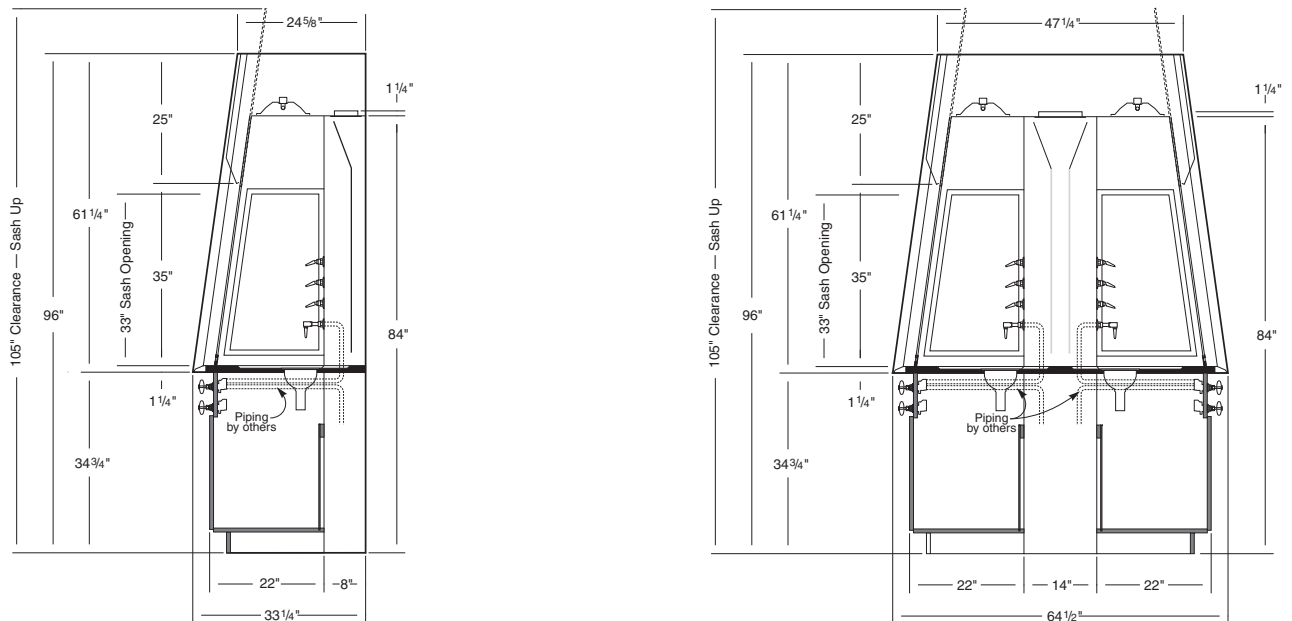 

ADA height base units subtracts 2" from cabinet height, overall height, and sash clearance, steel base cabinets add 1".